

1/13



Fig. 1A

ATTORNEY-CLIENT PRIVILEGED

2/13

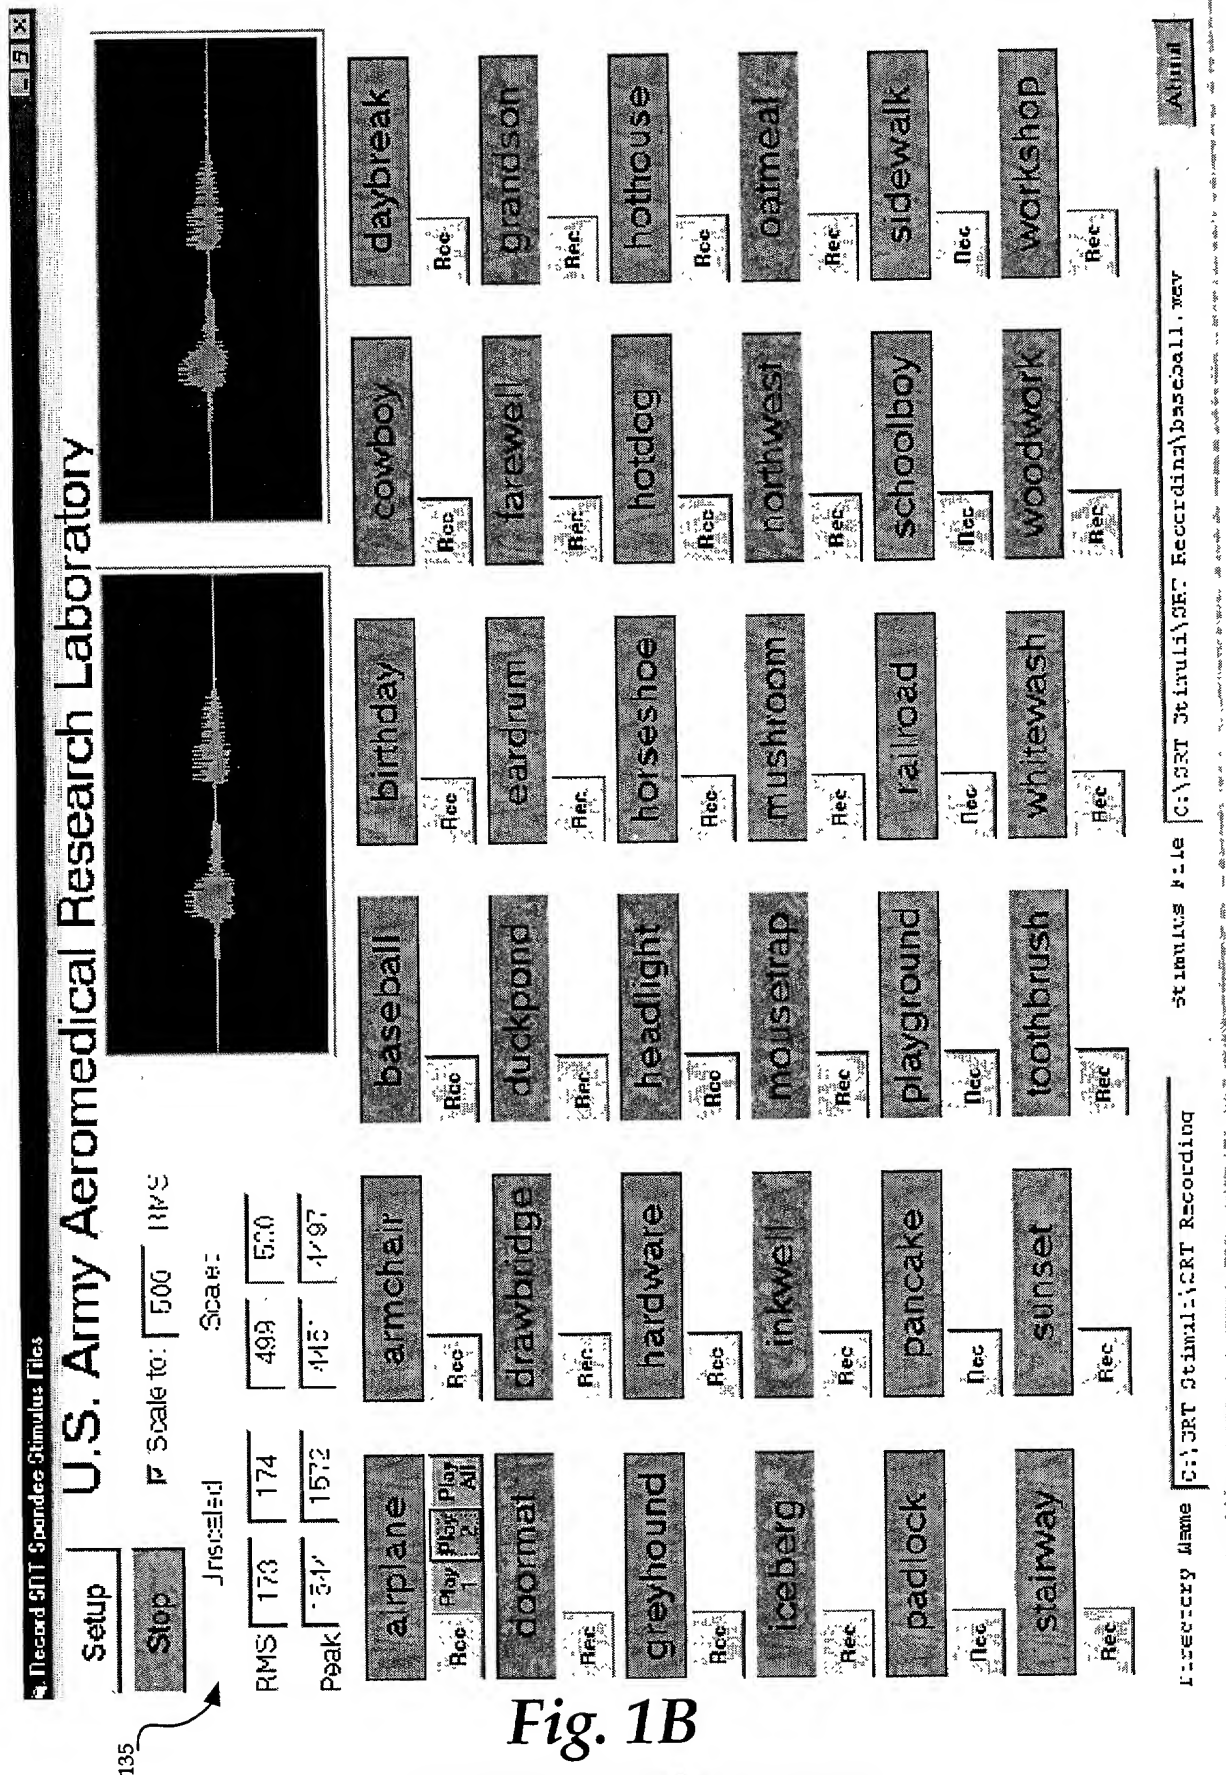


Fig. 1B

U.S. Army Aeromedical Research Laboratory

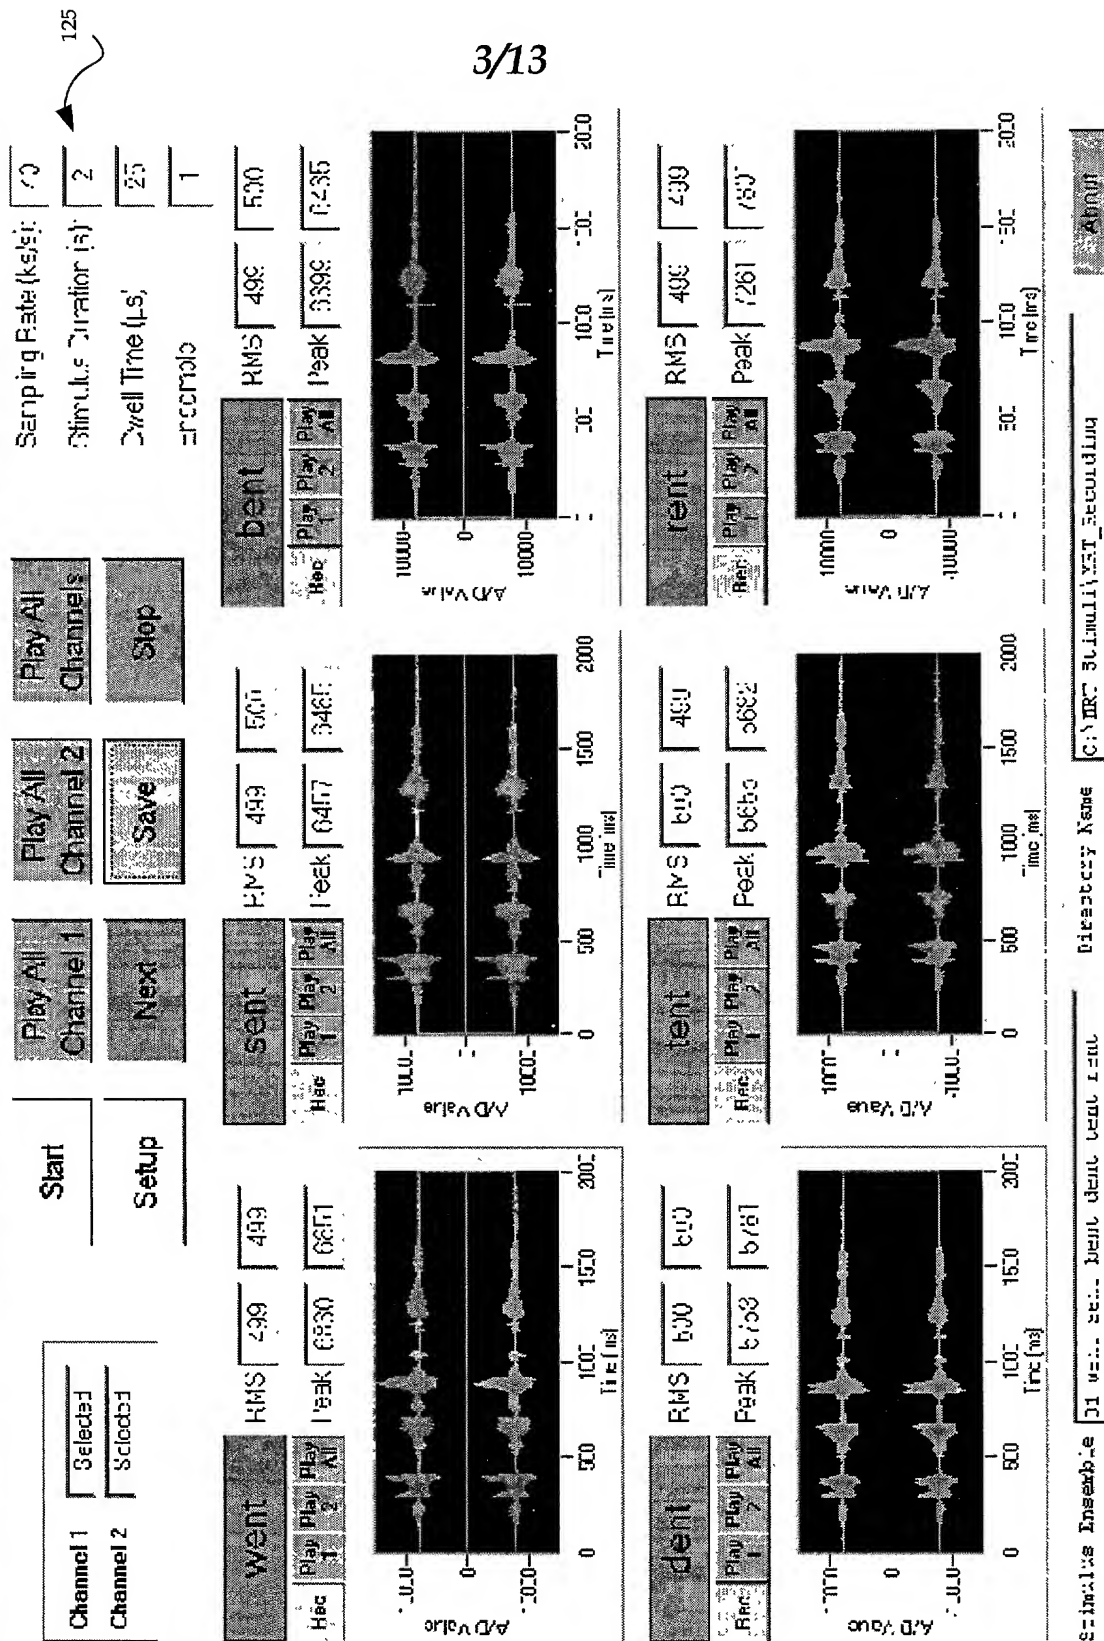


Fig. 1C

4/13


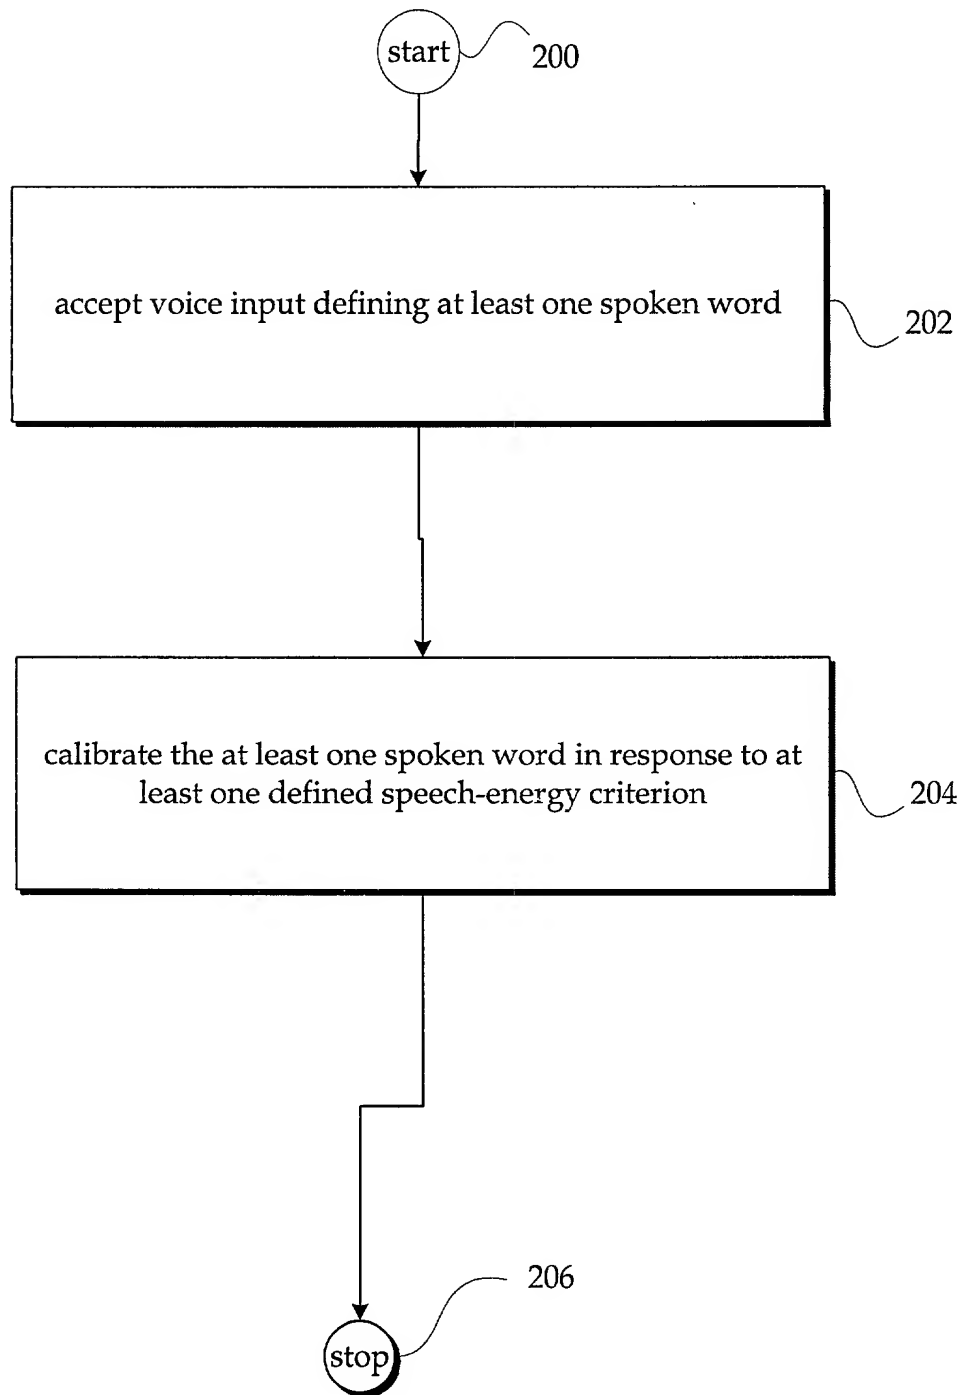


Fig. 2



6/13

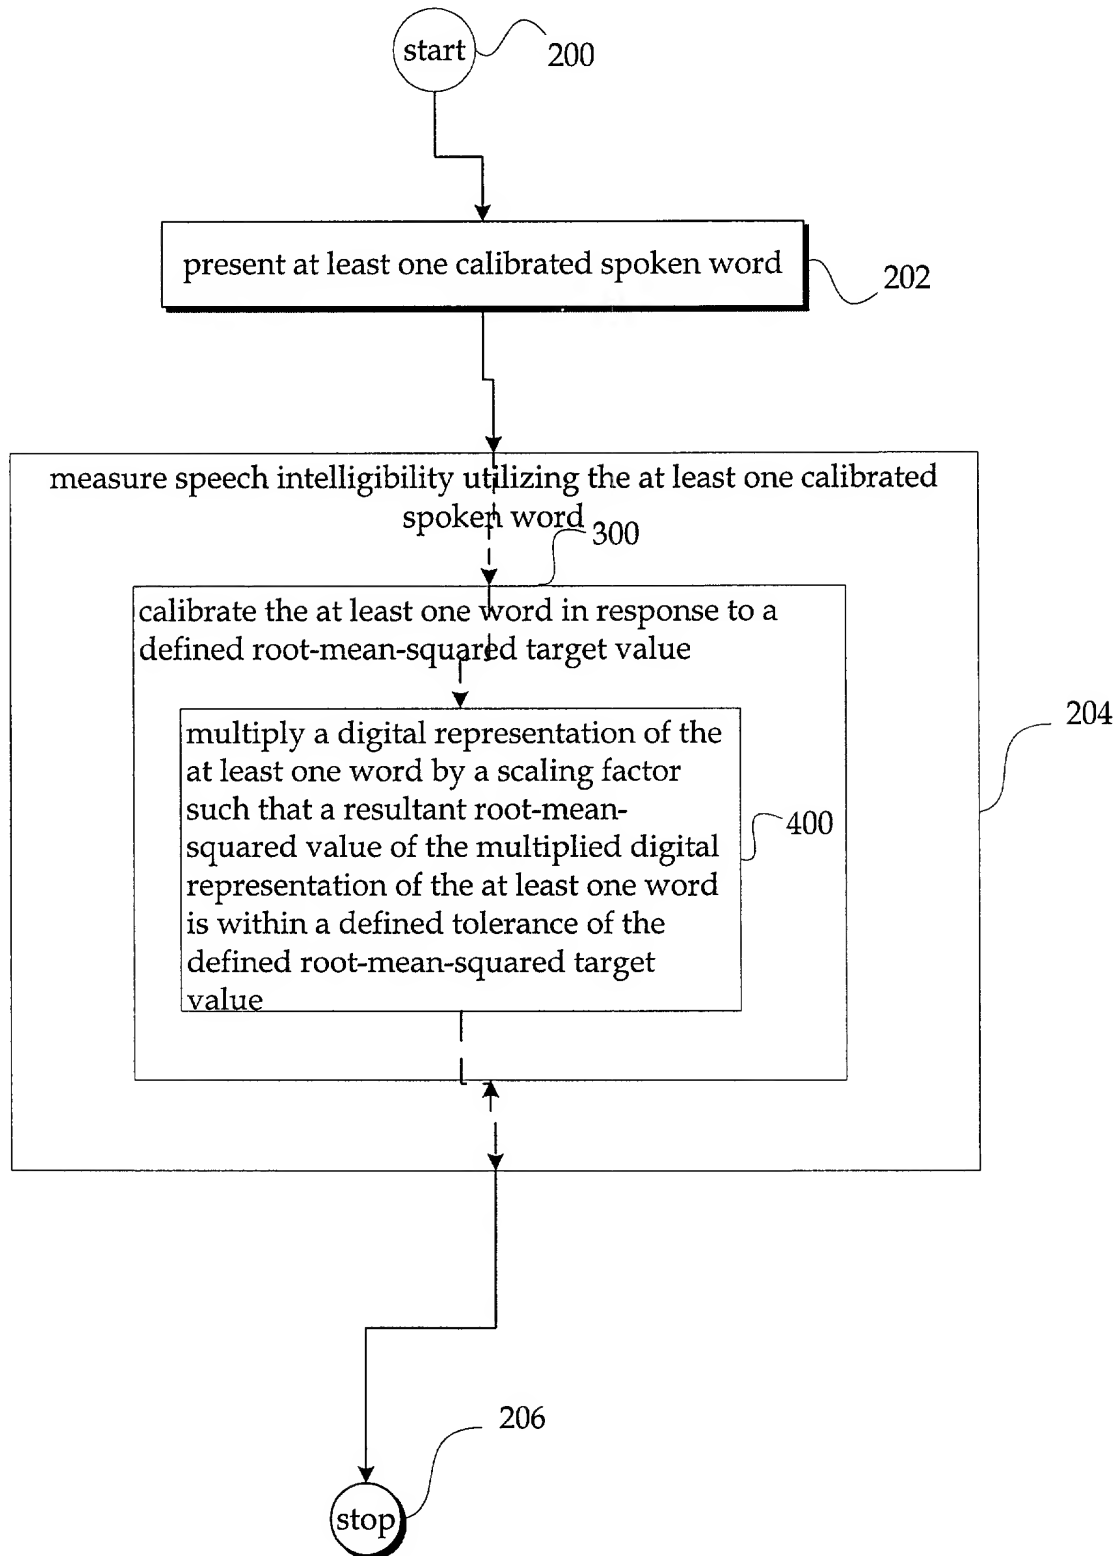


Fig. 4

7/13

Example of Calculation and
Creation of Scaled
Waveform

Assumed Target RMS Value = 500.

Assumed Tolerance Values = +/- 1% of Target RMS Value
(i.e., $495 < \text{Calculated RMS} < 505$).

Assumed Measured Waveform Values = 0, 234, 0, -134, 0.

Squared Waveform Values = 0, 54756, 0, 17956, 0

Sum of Squared Waveform Values = 72712.

Calculated RMS = Square Root of Sum of Squared Waveform Values

Calculated RMS = 269.6516.

Calculate Scaling Factor Since Calculated RMS
is Not Within Defined Tolerance = Target RMS Value/Calculated RMS = $500/269.6516$
= 1.854244

Scaled Assumed Measured Waveform Values = Target Values * Scaling Factor =
Creation of Scaled Waveform = 433.8932, 234, 0, -248.469, 0.

Check That Scaled Waveform Values Within Tolerance:

Squared Scaled Waveform Values = 188263.3, 0, 61736.71, 0.

Sum of Squared Scaled Waveform Values = 250000.

Calculated RMS of Scaled Values = 500, which is within defined defined tolerance
values about the target RMS value.

Fig. 11

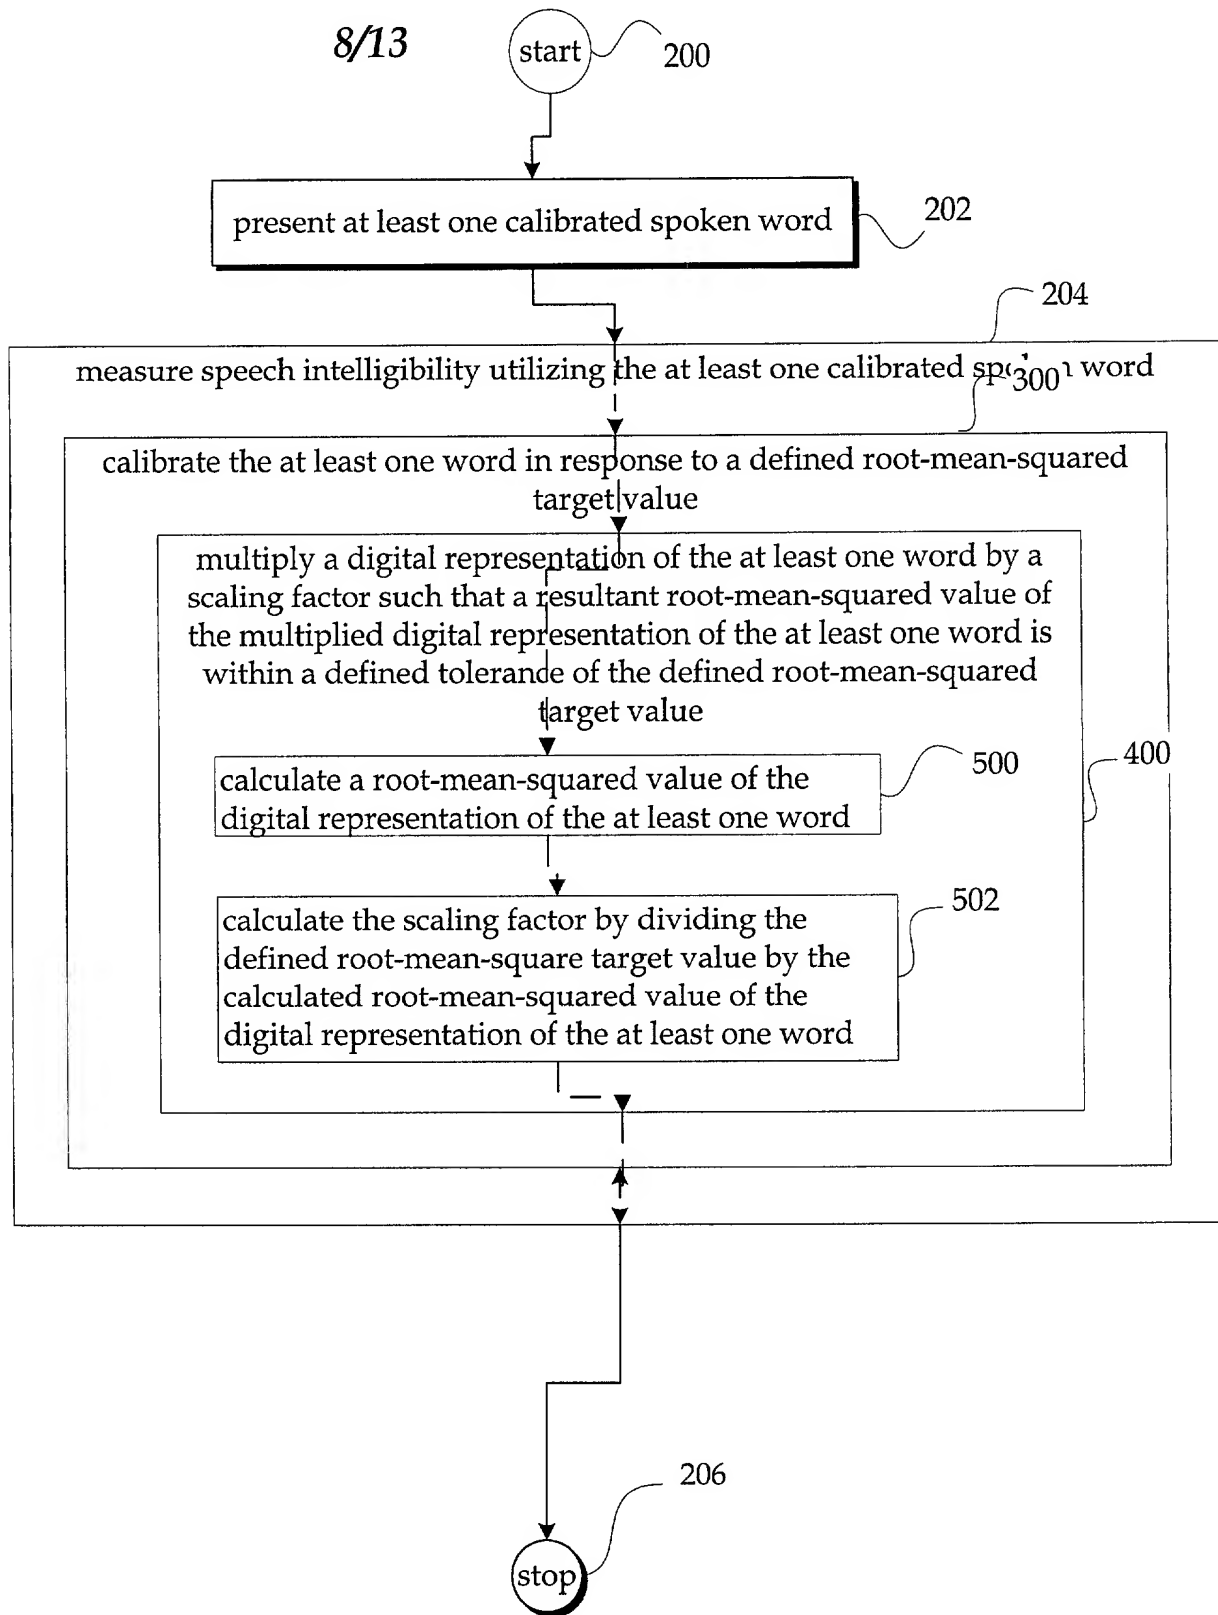
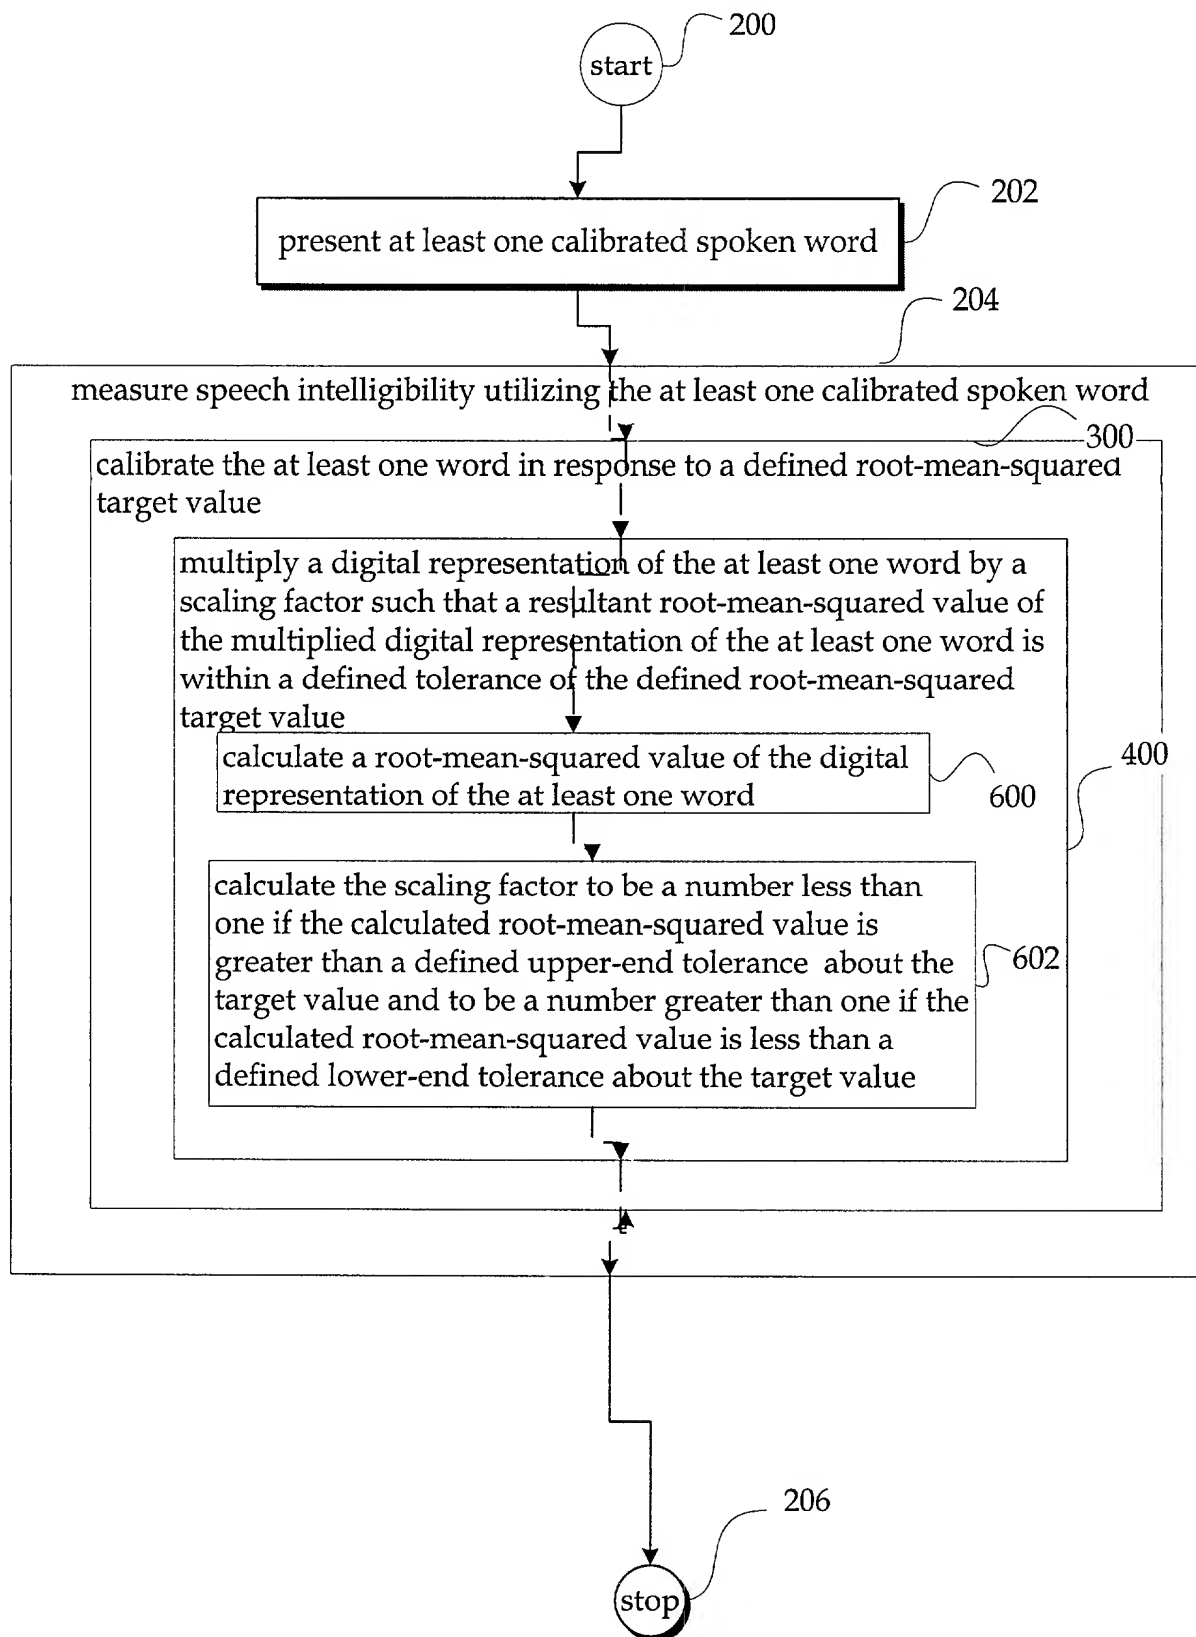


Fig. 5

9/13

*Fig. 6*

10/13

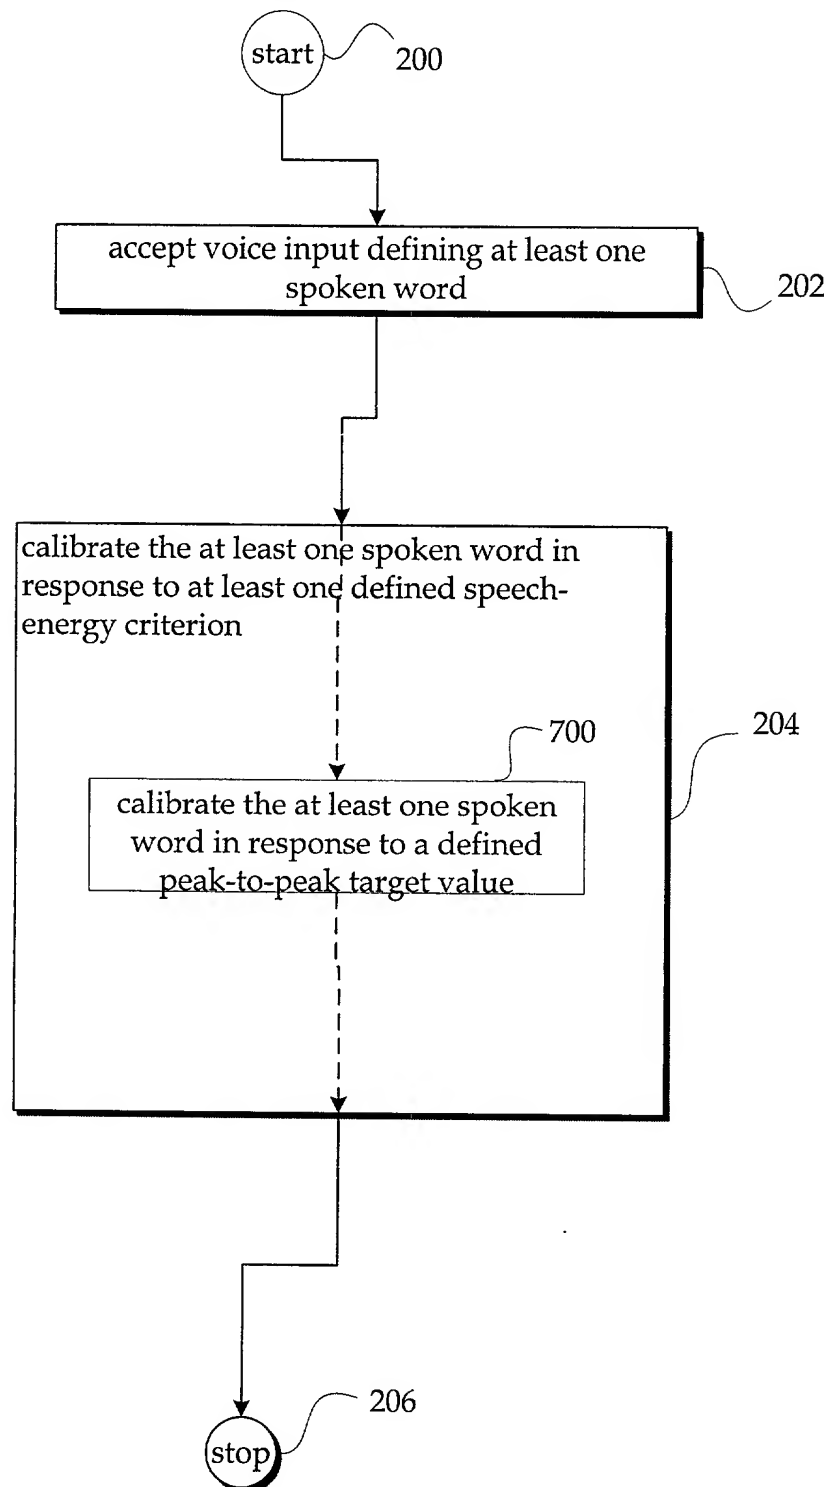


Fig. 7

11/13

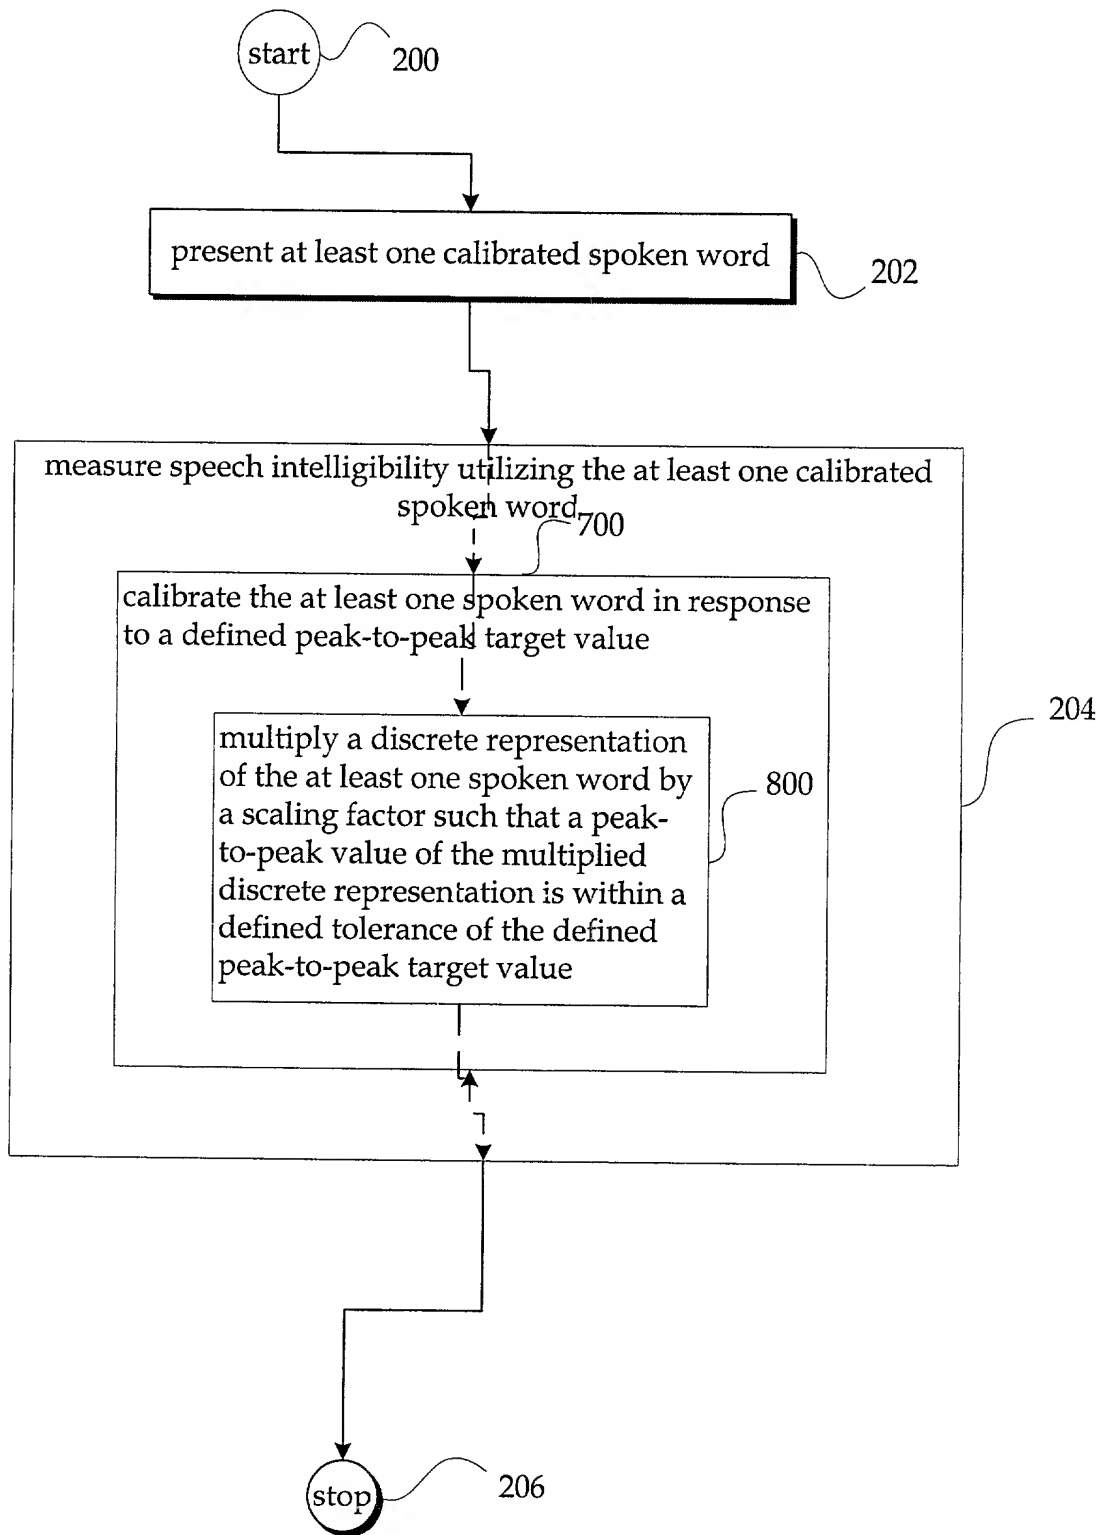


Fig. 8

12/13

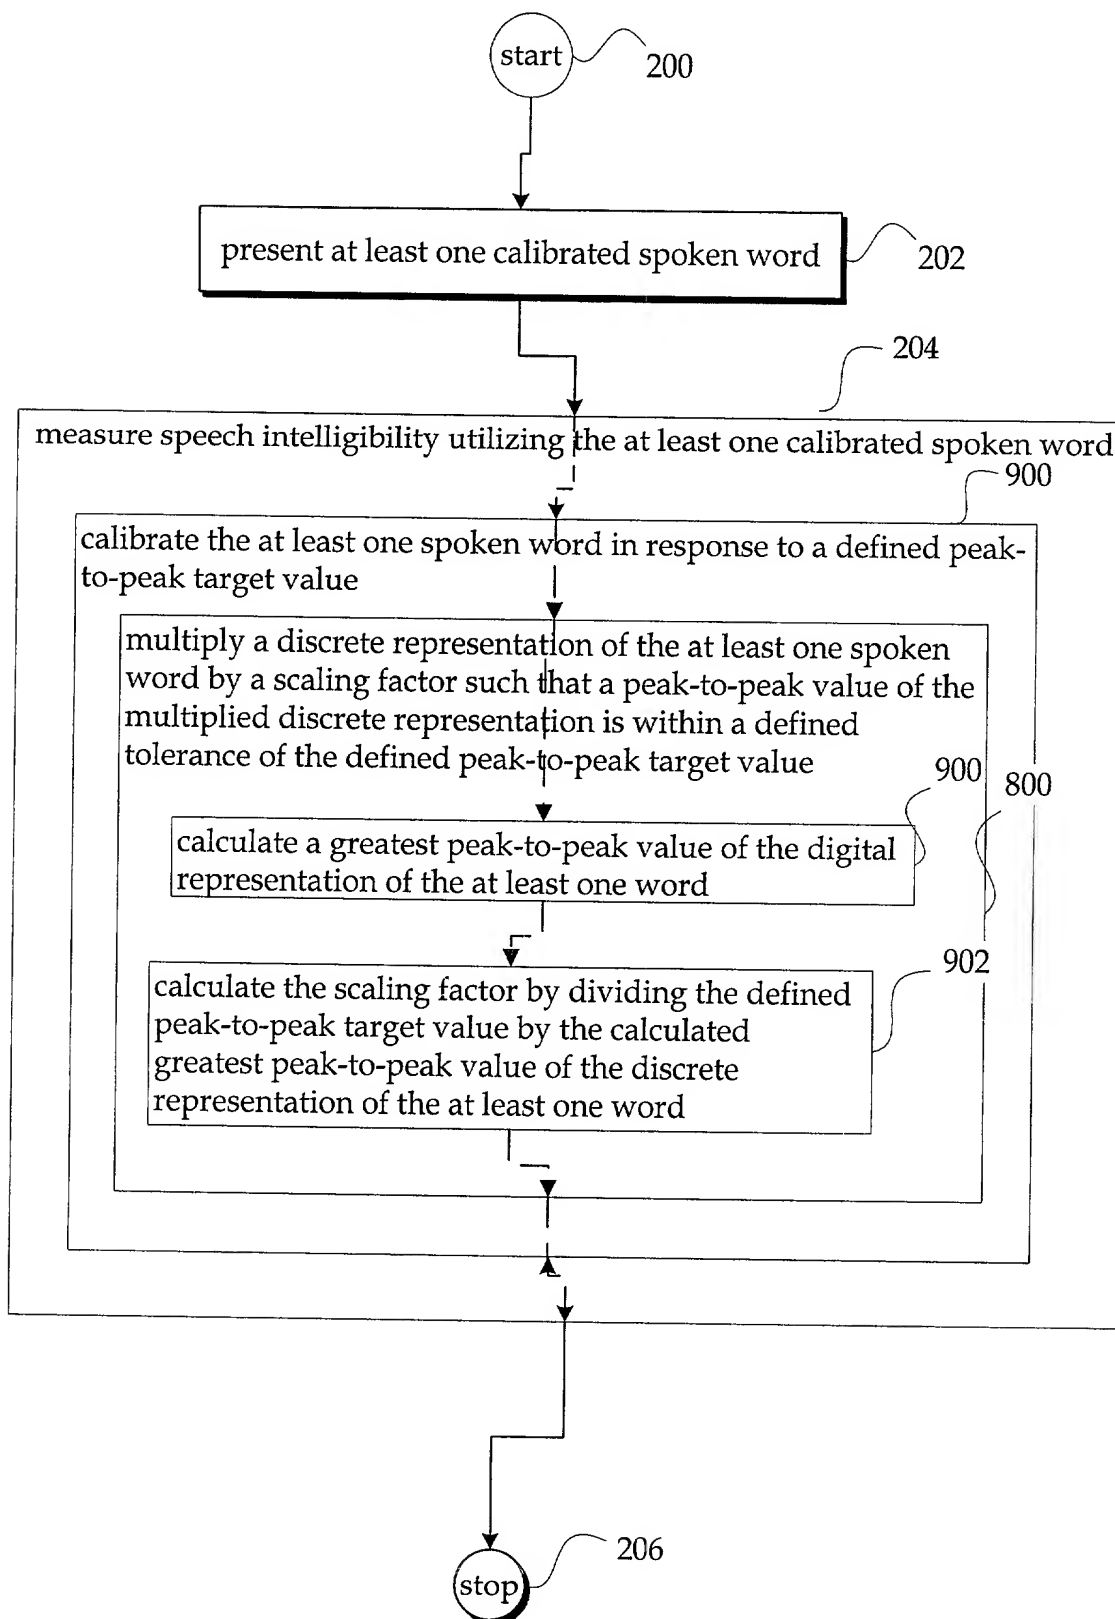


Fig. 9

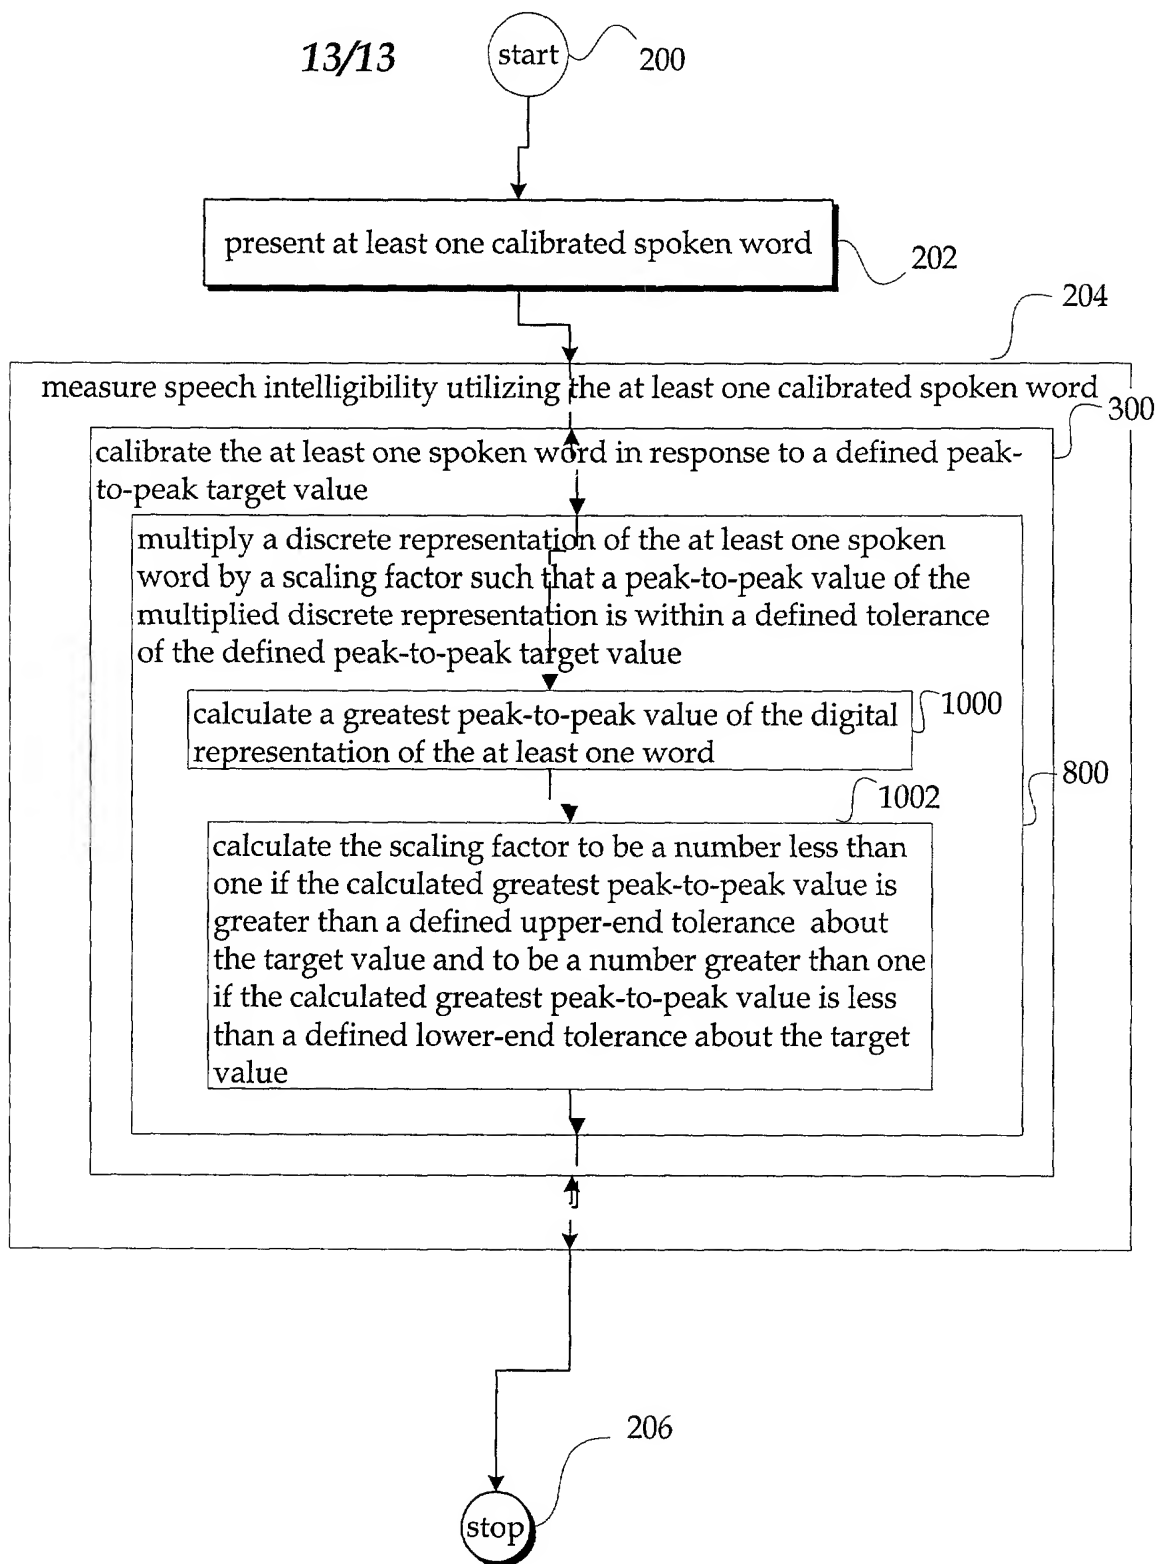


Fig. 10